



TELEMETRY FUNCTIONS




Updating the firmware




In order to take advantage of the telemetry functions, it is imperative that you install an **official Thrustmaster wheel** on the T818 base and that you update your base's firmware with the **latest firmware version**.


To carry out the update, go to <https://support.thrustmaster.com/product/t818>

Select **Firmware** and follow the instructions, including the downloading and installation procedure.

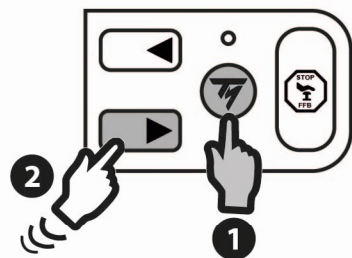
Adjusting the LED brightness



Press and hold button , then press button . Each press of button  increases the brightness by 25%. When you reach 100%, the next press switches the brightness to 0% and the cycle starts again: 0% - 25% - 50% - 75% - 100% - 0% - 25%...

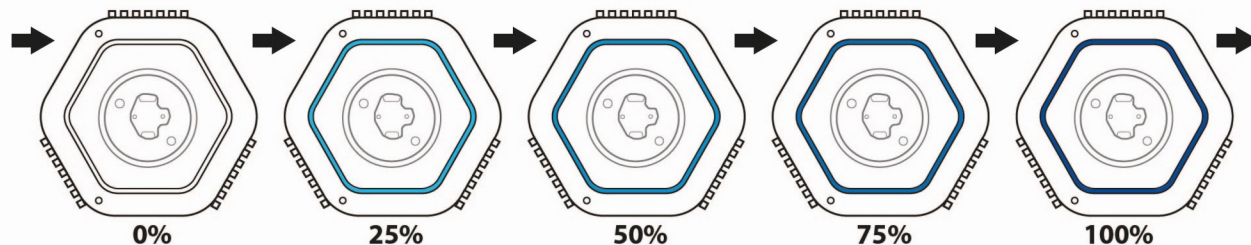

Choosing the telemetry pattern

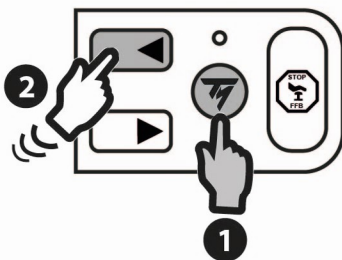





Press and hold button , then press button . Each press of button  moves on to the next telemetry pattern.

Pattern 0*

Pattern 1

Pattern 2

Pattern 3

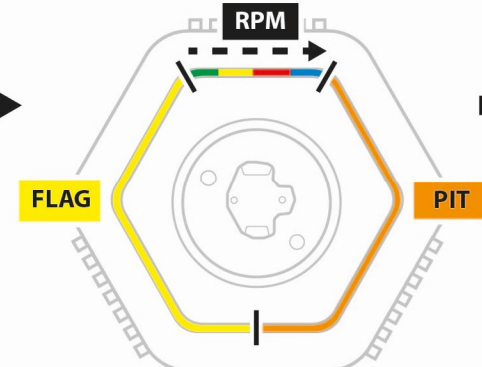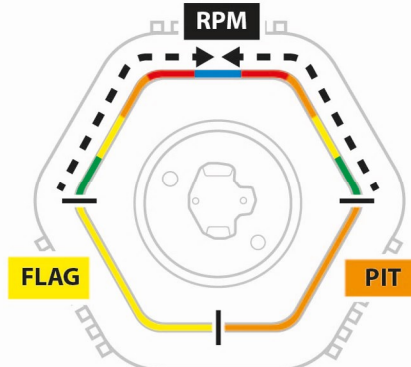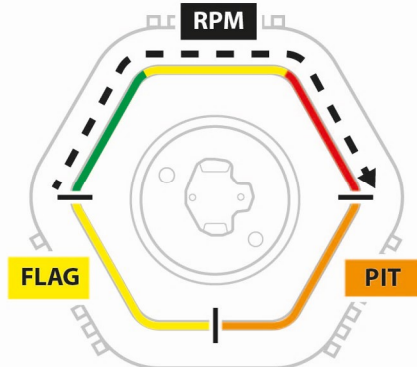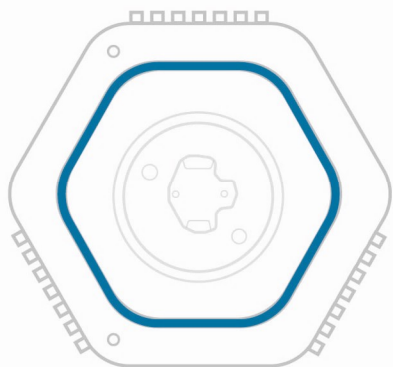

*default pattern. The hexagon of RGB LEDs displays the color selected in the Control Panel, without taking telemetry data into account.