

**Tip for using "Thrustmaster® PlayStation® 3" gamepads in the following games:**

**"Tom Clancy's Rainbow Six® Vegas - PlayStation® 3"**

**"Pirates of the Caribbean: At World's End - PlayStation® 3"**

**"Clive Barker's Jericho™ - PlayStation® 3"**

1) Launch the game with your "SONY® SIXAXIS®" gamepad set up on the "Player 1" port (= "1" LED on the gamepad is lit up) and your "Thrustmaster® gamepad" connected to a USB port on the console.

2) Once the game is launched, press the "PS" button on your "SONY® SIXAXIS®" gamepad and set up this gamepad on the "Player 2" port (= "2" LED on the gamepad is lit up).

3) Your "Thrustmaster® gamepad" is now functional.

**Note:** This procedure does not have to be carried out for other PlayStation® 3 games.